

Graphic Panel, Control Support Panel and Controls (Drawing 1 of 9)

REF	PART NO.	DESCRIPTION	COMMENTS
1	504009WP	End Panel	White; Left
	N/A	End Panel	Almond; Left
	504009QP	End Panel	Bisque; Left
2	501086	Screw	
3	39905W	Top Cover	White
	N/A	Top Cover	Almond
	39905Q	Top Cover	Bisque
4	36335	Temperature Switch	4 position; Models LWZ01M*-1102 and LWZ01N*-1102
	35115	Temperature Switch	3 position; All other models
5	201927P	Pressure Switch	Models LWS02N*-1122 and LWZ02N*-1102
	201609P	Pressure Switch	Models LWN311PP111NW22 and YWN311PP111CW01
	39035P	Pressure Switch	All other models
6	23962	Screw	
7	200885P	Timer	Models LWS01A*-3088, LWS01M*-3088 and LWS01N*-3088
	37930P	Timer	Models LWS01A*-3300, LWS01M*-3300 and LWS01N*-3300
	200927P	Timer	All other models
8	504008WP	End Panel	White; Right
	504008L	End Panel	Almond; Right
	504008QP	End Panel	Bisque; Right
9	35358	Hold-Down Clip	
10	200668	Graphic Panel	Models LWZ01M*-1102 and LWZ01N*-1102
	201842W	Graphic Panel	Model LWZ02N*-1102
	202236W	Control Panel	Model LWN311PP111NW22
	202238W	Control Panel	Model YWN311PP111CW01
	38887W	Graphic Panel	White; All other models
	38887Q	Graphic Panel	Bisque; All other models
11	38171	Control Support Panel	
12	00161	Grounding Clip	
13	N/A	Timer Skirt Assembly	White; Models LWS01A*-1000, LWS01A*-1088, LWS01A*-3088 and LWS01A*-3300
	36700W	Timer Skirt Assembly	White; All other models
	N/A	Timer Skirt Assembly	Almond; All other models
	36700Q	Timer Skirt Assembly	Bisque; All other models
14	N/A	Timer Knob	White; Models LWS01A*-1000, LWS01A*-1088, LWS01A*-3088 and LWS01A*-3300
	201501W	Timer Knob	White; All other models
	201501Q	Timer Knob	Bisque; All other models
15	33688	Knob Assembly	White; Models LWS01A*-1000, LWS01A*-1088, LWS01A*-3088 and LWS01A*-3300
	36701W	Knob Assembly	White; All other models
	36701L	Knob Assembly	Almond; All other models
	36701Q	Knob Assembly	Bisque; All other models

* Add Letter To Designate Color. L - Almond Q - Bisque W - White
N/A = Part no longer available

Graphic Panel, Control Support Panel and Controls (Drawing 2 of 9)

REF	PART NO.	DESCRIPTION	COMMENTS
1	504009WP	End Panel	White; Left
	N/A	End Panel	Almond; Left
	504009QP	End Panel	Bisque; Left
2	501086	Screw	
3	39905W	Top Cover	White
	N/A	Top Cover	Almond
	39905Q	Top Cover	Bisque
4	36335	Temperature Switch	4 position; Models LWZ22M*-1102 and LWZ22N*-1102
	35115	Temperature Switch	3 position; All other models
5	201609P	Pressure Switch	Models LWN311WP101NW22, LWN311WP111NW22, LWN311WP301NW22, LWN311WP331NW22 and LWN311WP541NW23
	39286P	Pressure Switch	Model LWN311WP541RW01
	201927P	Pressure Switch	All other models
6	23962	Screw	
7	37929P	Timer	Models LWZ22M*-1102 and LWZ22N*-1102
	37930P	Timer	Models LWN311WP331NW22, LWN311WP541NW23, LWN311WP541RW01, LWS16A*-3300, LWS16A*-3322, LWS16M*-3300, LWS16M*-3322, LWS16N*-3322 and LWS16N*-5423
	200885P	Timer	Models LWN311WP301NW22, LWS16A*-3000, LWS16A*-3022, LWS16M*-3000, LWS16M*-3022 and LWS16N*-3022
	200927P	Timer	Models LWN311WP111NW22, LWS16A*K, LWS16B*K, LWS16M*K, LWS16N*-1122 and LWS16N*K
	37928P	Timer	All other models
8	504008WP	End Panel	White; Right
	504008L	End Panel	Almond; Right
	504008QP	End Panel	Bisque; Right
9	35358	Hold-Down Clip	
10	38939W	Graphic Panel	Models LWZ16A*-1000, LWZ16M*-1000 and LWZ16N*-1000
	N/A	Graphic Panel	Models LWS16A*K, LWS16B*K, LWS16M*K and LWS16N*K
	200668	Graphic Panel	Models LWZ22M*-1102 and LWZ22N*-1102
	202236W	Control Panel	Models LWN311WP101NW22, LWN311WP111NW22, LWN311WP301NW22, LWN311WP331NW22 and LWN311WP541NW23
	38887W	Graphic Panel	White; All other models
38887Q	Graphic Panel	Bisque; All other models	
11	38171	Control Support Panel	
12	00161	Grounding Clip	
13	N/A	Timer Skirt Assembly	Models LWS16A*-1000, LWS16A*-3000, LWS16A*-3022, LWS16A*-3300, LWS16A*-3322 and LWZ16A*-1000
	36700W	Timer Skirt Assembly	White; All other models
	N/A	Timer Skirt Assembly	Almond; All other models
	36700Q	Timer Skirt Assembly	Bisque; All other models
14	N/A	Timer Knob	Models LWS16A*-1000, LWS16A*-3000, LWS16A*-3022, LWS16A*-3300, LWS16A*-3322 and LWZ16A*-1000
	201501W	Timer Knob	White; All other models
	201501Q	Timer Knob	Bisque; All other models
15	33688	Knob Assembly	Models LWS16A*-1000, LWS16A*-3000, LWS16A*-3022, LWS16A*-3300, LWS16A*-3322 and LWZ16A*-1000
	36701W	Knob Assembly	White; All other models
	36701L	Knob Assembly	Almond; All other models
	36701Q	Knob Assembly	Bisque; All other models

* Add Letter To Designate Color. L - Almond Q - Bisque W - White

N/A = Part no longer available

Graphic Panel, Control Support Panel and Controls (Drawing 4 of 9)

REF	PART NO.	DESCRIPTION	COMMENTS
1	504009WP	End Panel	White; Left
	N/A	End Panel	Almond; Left
	504009QP	End Panel	Bisque; Left
2	501086	Screw	
3	39905W	Top Cover	White
	N/A	Top Cover	Almond
	39905Q	Top Cover	Bisque
4	35115	Temperature Switch	3 position
5	39286P	Pressure Switch	
6	23962	Screw	
7	200885P	Timer	
8	504008WP	End Panel	White; Right
	504008L	End Panel	Almond; Right
	504008QP	End Panel	Bisque; Right
9	39922	Cable Connection Box	Models starting Serial No. 0204008036
10	39926	Lead-In Cord	Models starting Serial No. 0204008036
11	39923	Lead-In Wire Harness Assembly	Models starting Serial No. 0204008036
12	502511	Electrical Shock Label	Models starting Serial No. 0204008036
13	38171	Control Support Panel	
14	00161	Grounding Clip	
15	35358	Hold-Down Clip	
16	39921	Hood Back Panel	Models starting Serial No. 0204008036
17	N/A	Graphic Panel	
18	36700W	Timer Skirt Assembly	White
	N/A	Timer Skirt Assembly	Almond
	36700Q	Timer Skirt Assembly	Bisque
19	201501W	Timer Knob	White
	201501Q	Timer Knob	Bisque
20	36701W	Knob Assembly	White
	36701L	Knob Assembly	Almond
	36701Q	Knob Assembly	Bisque

* Add Letter To Designate Color. L - Almond Q - Bisque W - White

N/A = Part no longer available

Graphic Panel, Control Support Panel and Controls (Drawing 6 of 9)

REF	PART NO.	DESCRIPTION	COMMENTS
1	23962	Screw	
2	504009WP	End Panel	White; Left
	N/A	End Panel	Almond; Left
	504009QP	End Panel	Bisque; Left
3	39905W	Top Cover	White
	N/A	Top Cover	Almond
	39905Q	Top Cover	Bisque
4	35115	Temperature Switch	3 position
5	39286P	Pressure Switch	
6	25820	Washer	
7	55882	Switch Assembly	
8	200885P	Timer	
9	504008WP	End Panel	White; Right
	504008L	End Panel	Almond; Right
	504008QP	End Panel	Bisque; Right
10	36841	Terminal Block	
11	N/A	Strain Relief	
12	502511	Electrical Shock Label	
13	37782	Hood Back Panel	
14	02788	Nut	
15	21734	Washer	
16	35358	Hold-Down Clip	
17	28447	Nut	
18	28449	Washer	
19	37225P	Control Lid Lock Assembly	
20	501523	Circuit Board Support	
21	28448	Screw	
22	Q6516	Screw	
23	38171	Control Support Panel	
24	39082W	Graphic Panel	Models LWS17A*B3069 and LWS17M*B3069
	N/A	Graphic Panel	Models LWZ17A*B3069 and LWZ17M*B3069
25	N/A	Timer Skirt Assembly	Models LWS17A*B3069 and LWZ17A*B3069
	36700W	Timer Skirt Assembly	White; Models LWS17M*B3069 and LWZ17M*B3069
	N/A	Timer Skirt Assembly	Almond; Models LWS17M*B3069 and LWZ17M*B3069
	36700Q	Timer Skirt Assembly	Bisque; Models LWS17M*B3069 and LWZ17M*B3069
26	N/A	Timer Knob	Models LWS17A*B3069 and LWZ17A*B3069
	201501W	Timer Knob	White; Models LWS17M*B3069 and LWZ17M*B3069
	201501Q	Timer Knob	Bisque; Models LWS17M*B3069 and LWZ17M*B3069
27	N/A	Nut	
28	N/A	Switch Collar	
29	39536	Lid Switch Indicator Light	
30	33688	Knob Assembly	Models LWS17A*B3069 and LWZ17A*B3069
	36701W	Knob Assembly	White; Models LWS17M*B3069 and LWZ17M*B3069
	36701L	Knob Assembly	Almond; Models LWS17M*B3069 and LWZ17M*B3069
	36701Q	Knob Assembly	Bisque; Models LWS17M*B3069 and LWZ17M*B3069

* Add Letter To Designate Color. L - Almond Q - Bisque W - White

N/A = Part no longer available