


# Atlas Copco

Oil-injected rotary screw air compressors

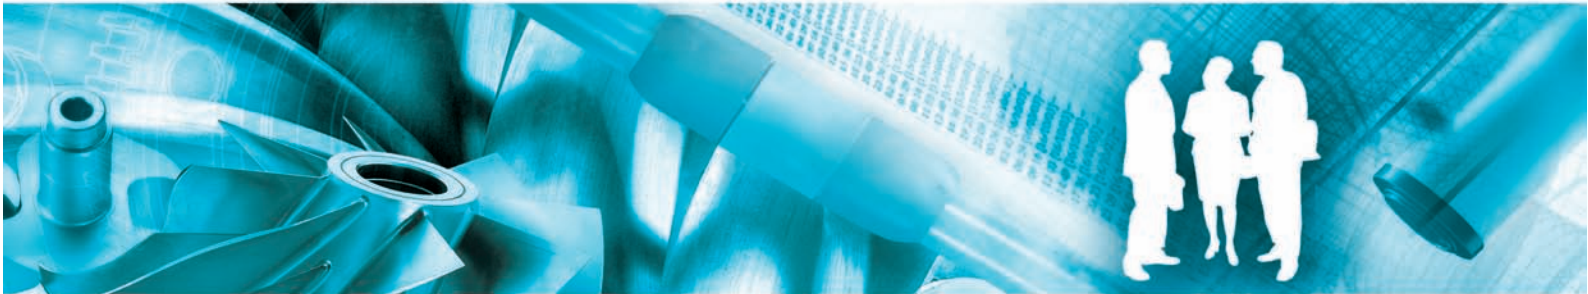

GA 30+, GA 37, GA 45

**Parts list**



## Service kits

1

Ref.	Part number	Qty	Name	Remarks
		<b>1</b>	<b>Oil</b>	
	<b>2901 0245 01</b>		ROTO-INJECTFLUID - 5 litre	
	<b>2901 0522 00</b>		ROTO-INJECTFLUID - 20 litre	
	<b>2901 0045 01</b>		ROTO-INJECTFLUID - 209 litre	
		<b>1</b>	<b>Oil filter kit</b>	
	1622 3652 80 •	1	Oil filter element	
	0663 2106 16 •	1	O-ring	
		<b>1</b>	<b>Minimum Pressure Valve kit</b>	
	<b>2901 1453 00</b>			
	0335 3111 00 •	1	Retaining ring	
	0663 2101 01 •	1	O-ring	
	0663 3120 00 •	1	O-ring	
	0663 7139 00 •	1	O-ring	
	1613 3223 01 •	1	Washer	
	1622 3662 00 •	1	Spring	
	1622 3664 00 •	1	Spring	
		<b>1</b>	<b>Thermostatic valve kit 40°C</b>	
	<b>2901 1616 00</b>			
	0663 2101 95 •	1	O-ring	
	1622 7064 01 •	1	Thermostatic valve	
	9820 9573 00 •	1	Thermostat kit	
		<b>1</b>	<b>Thermostatic valve kit 60°C</b>	
	<b>2901 1617 00</b>			
	0663 2101 95 •	1	O-ring	
	1622 7064 04 •	1	Thermostatic valve	
	9820 9574 00 •	1	Thermostat kit	
		<b>1</b>	<b>Tropical thermostat kit 75°C</b>	
	<b>2901 1618 00</b>			
	0663 2101 95 •	1	O-ring	
	1622 7064 05 •	1	Thermostatic valve	
	9820 9575 00 •	1	Thermostat kit	
		<b>1</b>	<b>Oil stop/Check valve kit</b>	
	<b>2901 0217 02</b>			
	0661 1000 39 •	1	Seal washer	
	0661 1000 44 •	1	Seal washer	
	0663 3125 00 •	1	O-ring	
	0663 3130 00 •	1	O-ring	
	0686 3718 15 •	1	Plug	
	1613 2357 00 •	1	Compr.spring	
	1613 8907 00 •	1	Valve body	
	1622 0796 00 •	1	Spring	
	1622 4664 01 •	1	Gasket	
	1622 9639 00 •	1	Check valve	
	9820 9424 00 •	1	Instruct drwg	
		<b>1</b>	<b>Litdeufd 120-210</b>	
	<b>2901 0148 00</b>			
		<b>1</b>	<b>Motor overhaul kit</b>	
	<b>2901 1619 00</b>			
	0335 2173 00 •	1	Circlip	
	0502 1092 56 •	1	Bearing	
	0508 1100 97 •	1	Roller bearing	
	0663 2107 89 •	1	O-ring	
	1622 3106 00 •	1	Bushing	