

## Scope of the S5-90U/S5-95U System Manual

The S5-90U/S5-95U System Manual is valid for the following programmable controllers:

- S5-90U from Order No. 6ES5 090-8MA01, Edition 02
- S5-95U from Order No. 6ES5 095-8MA04, Edition 01
- S5-95U from Order No. 6ES5 095-8MB03, Edition 01
- S5-95U from Order No. 6ES5 095-8MC02, Edition 01
- S5-95U from Order No. 6ES5 095-8MD02, Edition 01

The Manuals listed below are required for starting up the S5-90U and the various versions of the S5-95U programmable controller.

Programmable Controller	Manuals Required for Start-Up
<b>S5-90U</b> Order No. 6ES5 090-8MA01	<ul style="list-style-type: none"> <li>• S5-90U/S5-95U System Manual, Order No. 6ES5 998-8MA22</li> </ul>
<b>S5-95U (basic unit),</b> Order No. 6ES5 095-8MA04	<ul style="list-style-type: none"> <li>• S5-90U/S5-95U System Manual, Order No. 6ES5 998-8MA22</li> </ul>
<b>S5-95U, SINEC L2 Interface,</b> Order No. 6ES5 095-8MB03	<ul style="list-style-type: none"> <li>• S5-90U/S5-95U System Manual, Order No. 6ES6 998-8MA22</li> <li>• SINEC L2 Interface of the S5-95U Manual, Order No. 6ES5 998-8MB22</li> </ul>
<b>S5-95U, Second Serial Interface,</b> Order No. 6ES5 095-8MC02	<ul style="list-style-type: none"> <li>• S5-90U/S5-95U System Manual, Order No. 6ES5 998-8MA22</li> <li>• Second Serial Interface of the S5-95U Manual Order No. 6ES5 998-8MC21</li> </ul>
<b>S5-95U, SINEC L2-DP Interface,</b> Order No. 6ES5 095-8MD02	<ul style="list-style-type: none"> <li>• S5-90U/S5-95U System Manual, Order No. 6ES5 998-8MA22</li> <li>• SINEC L2-DP Interface of the S5-95U Manual, Order No. 6ES5 998-8MD21</li> </ul>

## Training

Siemens offers a wide range of training courses for SIMATIC S5 users. Contact your Siemens representative for more information.