

Selector Switch Operators




2 Position Selector Switches		
Description (M = Maintained, S = Spring Return)	Chrome	Corrosion Resistant
	T4011	E34VFB
	T4081	E34VEB

3 Position Selector Switches			
Description (M = Maintained, S = Spring Return)	Cam Code*	Chrome	Corrosion Resistant
	2	T4022	E34VGB
	3	T4023	E34VHB
	4	T4024	-
	6	T4026	-
	2	T4032	E34VJB
	3	T4033	E34VKB
	2	T4042	E34VLB
	3	T4043	E34VMB
	2	T4052	E34VNB
	3	T4053	E34VPB

4 Position Selector Switches			
Description	Cam Code*	Chrome	Corrosion Resistant
Maintained	7	T4067	E34VTB

* Note: See page 20 for cam selection guide


Selector Switch Knobs and Levers

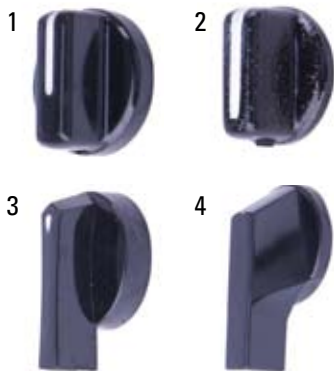

Knobs and Levers			
Description	Material	Image	Part Number
Knob	Plastic	1	E34K1
	Metal	2	T341M
Lever	Plastic*	3	E34L1
	Metal	4	E34A1

* Note: For maintained operators only

Step 1




Choose selector switch operator from above

Step 2


Choose cam based on contact sequence from cam selection guide table on page 22 (applies to 3 position selector switches only)

Step 3



Choose knob or lever from above

Step 4



Select contact block according to cam selection guide on page 22