

# Model Number

NJ4-12GM-N

### **Features**

- 4 mm non-flush
- Usable up to SIL 2 acc. to IEC 61508


### Accessories

BF 12

Mounting flange, 12 mm

1		
Technical Data		
General specifications		
Switching function		Normally closed (NC)
Output type		NAMUR
Rated operating distance	Sn	4 mm
Installation	-11	non-flush
Assured operating distance	Sa	0 3.24 mm
Reduction factor r <sub>AI</sub>	ŭ	0.4
Reduction factor r <sub>Cu</sub>		0.3
Reduction factor r <sub>304</sub>		0.85
Nominal ratings		
Nominal voltage	Uo	8.2 V (R <sub>j</sub> approx. 1 kΩ)
Switching frequency	f	0 1500 Hz
Hysteresis	Н	3 %
Current consumption		
Measuring plate not detected		≥ 3 mA
Measuring plate detected		≤ 1 mA
Functional safety related parameter	ers	
MTTF <sub>d</sub>		11774 a
Mission Time (T <sub>M</sub> )		20 a
Diagnostic Coverage (DC)		0 %
Ambient conditions		
Ambient temperature		-25 100 °C (-13 212 °F)
Mechanical specifications		
Connection type		cable PVC , 2 m
Core cross-section		0.34 mm <sup>2</sup>
Housing material		Stainless steel 1.4305 / AISI 303
Sensing face		PBT
Degree of protection		IP67
Cable		
Bending radius		> 10 x cable diameter
General information		
Scope of delivery		2 self locking nuts in scope of delivery
Use in the hazardous area		see instruction manuals
Category		1G; 2G; 1D
Compliance with standards and d	irective	S
Standard conformity		
NAMUB		EN 60947-5-6:2000
NAMON		IEC 60947-5-6:1999
Standards		EN 60947-5-2:2007 IEC 60947-5-2:2007
Approvals and certificates		
FM approval		
Control drawing		116-0165
UL approval		cULus Listed, General Purpose
CSA approval		cCSAus Listed, General Purpose
CCC approval		CCC approval / marking not required for products rated $\leq$ 36 V

#### Dimensions

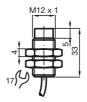

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".


Pepperl+Fuchs Group U www.pepperl-fuchs.com fa-inf

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



# NJ4-12GM-N

## **Electrical Connection**

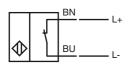

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



2

Equipment protection level Ga	
Instruction	Manual electrical apparatus for hazardous areas
Device category 1G	for use in hazardous areas with gas, vapour and mist
EC-Type Examination Certificate	PTB 00 ATEX 2048 X
CE marking	<b>C E</b> 0102
ATEX marking	$\langle \!$
Standards	EN 60079-0:2012+A11:2013 EN 60079-11:2012 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions
Appropriate type	NJ 4-12GM-N
Effective internal inductivity C <sub>i</sub>	$\leq$ 45 nF ; a cable length of 10 m is considered.
Effective internal inductance L <sub>i</sub>	$\leq$ 50 $\mu H$ ; a cable length of 10 m is considered.
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EU-type examination certificate has to be observed. The special conditions must be adhered to! The ATEX directive and therefore the EU-type examination certificates apply in gen- eral only to the use of electrical apparatus under atmospheric conditions. The use in ambient temperatures of > 60 °C was tested with regard to hot surfaces by the mentioned certification authority. If the equipment is not used under atmospheric conditions, a reduction of the permis- sible minimum ignition energies may have to be taken into consideration.
Ambient temperature	Details of the correlation between the type of circuit connected, the maximum per- missible ambient temperature, the temperature class, and the effective internal reac- tance values can be found on the EC-type examination certificate. <b>Note:</b> Use the temperature table for category 1 !!! The 20 % reduction in accordance with EN 1127- 1 has already been applied to the temperature table for category 1.
Installation, commissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety. The associated apparatus must satisfy the requirements of category ia. Due to the possible danger of ignition, which can arise due to faults and/or transient currents in the equipotential bonding system, galvanic isolation of the power supply and signal circuit is preferable. Associated apparatus without electrical isolation must only be used if the appropriate requirements of IEC 60079-14 are met. If the Exrelated marking is printed only on the supplied label, then this must be attached in the immediate vicinity of the sensor. The sticking surface for the label must be clean and free from grease. The attached label must be legible and indelible, including in the event of possible chemical corrosion.
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.
Special conditions	The connecting parts of the sensor must be set up in such a way that degree of pro- tection IP20, in accordance with IEC 60529, is achieved as a minimum.
Protection from mechanical danger	When using the device in a temperature range of -60 °C to -20 °C, protect the sensor against the effects of impact by installing an additional enclosure. The information regarding the minimum ambient temperature for the sensor as provided in the datasheet must also be observed.
Electrostatic charge	Electrostatic charges on the metal housing components must be avoided. Danger- ous electrostatic charges on the metal housing components can be avoided by incor- porating these components in the equipotential bonding.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group www.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Equipment protection level Gb	
Instruction	Manual electrical apparatus for hazardous areas
Device category 2G	for use in hazardous areas with gas, vapour and mist
EC-Type Examination Certificate	PTB 00 ATEX 2048 X
CE marking	<b>CE</b> 0102
ATEX marking	$\langle\!$
Standards	EN 60079-0:2012+A11:2013 EN 60079-11:2012 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions
Appropriate type	NJ 4-12GM-N
Effective internal inductivity C <sub>i</sub>	$\leq$ 45 nF ; a cable length of 10 m is considered.
Effective internal inductance L <sub>i</sub>	$\leq$ 50 $\mu H$ ; a cable length of 10 m is considered.
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EU-type examination certificate has to be observed. The special conditions must be adhered to! The ATEX directive and therefore the EU-type examination certificates apply in gen- eral only to the use of electrical apparatus under atmospheric conditions. The use in ambient temperatures of > 60 °C was tested with regard to hot surfaces by the mentioned certification authority. If the equipment is not used under atmospheric conditions, a reduction of the permis- sible minimum ignition energies may have to be taken into consideration.
Maximum permissible ambient temperature T <sub>amb</sub>	Details of the correlation between the type of circuit connected, the maximum per- missible ambient temperature, the temperature class, and the effective internal reac- tance values can be found on the EC-type examination certificate.
Installation, commissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appro- priate related apparatus and according to the proof of intrinsic safety. If the Ex-related marking is printed only on the supplied label, then this must be attached in the immediate vicinity of the sensor. The sticking surface for the label must be clean and free from grease. The attached label must be legible and indeli- ble, including in the event of possible chemical corrosion.
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.
Special conditions	The connecting parts of the sensor must be set up in such a way that degree of pro- tection IP20, in accordance with IEC 60529, is achieved as a minimum.
Protection from mechanical danger	When using the device in a temperature range of -60 °C to -20 °C, protect the sensor against the effects of impact by installing an additional enclosure. The information regarding the minimum ambient temperature for the sensor as provided in the datasheet must also be observed.
Electrostatic charge	Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding.

4

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com



Equipment protection level Da	
Instruction	Manual electrical apparatus for hazardous areas
Device category 1D EC-Type Examination Certificate CE marking	for use in hazardous areas with combustible dust PTB 00 ATEX 2048 X € €0102
CE marking	C 0102
ATEX marking	↔ II 1D Ex ia IIIC T135°C Da The Ex-related marking can also be printed on the enclosed label.
Standards	EN 60079-0:2012+A11:2013 EN 60079-11:2012 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions
Appropriate type	NJ 4-12GM-N
Effective internal inductivity C <sub>i</sub>	$\leq$ 45 nF ; a cable length of 10 m is considered.
Effective internal inductance L <sub>i</sub>	$\leq$ 50 $\mu H$ ; a cable length of 10 m is considered.
General	The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EU-type examination certificate has to be observed. The ATEX directive and therefore the EU-type examination certificates apply in gen- eral only to the use of electrical apparatus under atmospheric conditions. The use in ambient temperatures of $> 60$ °C was tested with regard to hot surfaces by the mentioned certification authority. If the equipment is not used under atmospheric conditions, a reduction of the permis- sible minimum ignition energies may have to be taken into consideration.
Maximum permissible ambient temperature $T_{amb}$	Details of the correlation between the type of circuit connected, the maximum per- missible ambient temperature, the surface temperature, and the effective internal reactance values can be found on the EC-type-examination certificate. The maximum permissible ambient temperature of the data sheet must be noted, in addition, the lower of the two values must be maintained.
Installation, commissioning	Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related appara- tus and according to the proof of intrinsic safety. If the Ex-related marking is printed only on the supplied label, then this must be attached in the immediate vicinity of the sensor. The sticking surface for the label must be clean and free from grease. The attached label must be legible and indeli- ble, including in the event of possible chemical corrosion.
Maintenance	No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.
Special conditions	The connecting parts of the sensor must be set up in such a way that degree of pro- tection IP20, in accordance with IEC 60529, is achieved as a minimum.
Protection from mechanical danger	When using the device in a temperature range of -60 °C to -20 °C, protect the sensor against the effects of impact by installing an additional enclosure. The information regarding the minimum ambient temperature for the sensor as provided in the datasheet must also be observed.
Electrostatic charge	Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding. Do not attach the namenlate provided in areas where electrostatic charge can build

Do not attach the nameplate provided in areas where electrostatic charge can build up.

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

