




## Programmable Thermostat

## Owner's Manual

### Read and save these instructions.

For help please visit  
[honeywellhome.com](http://honeywellhome.com)

# RTH2510/ RTH2410 Series

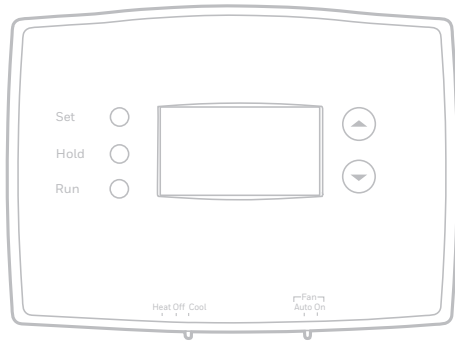

## Identify System Type

This thermostat is compatible with the following systems:

- Gas, oil or electric furnace
- Central air conditioner
- Hot water system with or without pump
- Millivolt system
- Central heating and cooling system
- Heat pump without auxiliary/backup heat
- Heat pump with auxiliary/backup heat



**NO MERCURY  
NE PAS JETER  
LE MERCURE**



**CAUTION: MERCURY NOTICE**

If this product is replacing a control that contains mercury in a sealed tube, do not place the old control in the trash. Contact your local waste management authority for instructions regarding recycling and proper disposal.



**CAUTION: ELECTRONIC WASTE NOTICE**

The product should not be disposed of with other household waste. Check for the nearest authorized collection centers or authorized recyclers. The correct disposal of end-of-life equipment will help prevent negative consequences for the environment and human health.

FCC statement at: <https://customer.resideo.com/en-US/support/residential/codes-and-standards/FCC15105/Pages/default.aspx>



**NOTICE:** To avoid possible compressor damage, do not run air conditioner if the outside temperature drops below 50°F (10°C).

## Customer Assistance


For assistance with this product, please visit [honeywellhome.com](http://honeywellhome.com).

Or call Resideo Customer Care toll-free at 1-800-468-1502.

To save time, please note your model number and date code before calling.

Pull at bottom to remove thermostat from wallplate.

Turn thermostat over to find model number and date code.

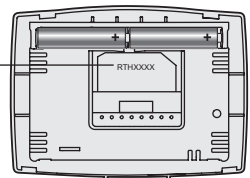

M32707

# Table of Contents

## Installation

Installation.....	3
Advanced Installation .....	9

## About Your New Thermostat

Controls and Home Screen	
Quick Reference.....	11
Preset Energy-Saving Schedules.....	12

## Programming and Operation


Setting the Clock.....	12
Adjusting Program Schedules.....	13

Overriding Schedule Temporarily.....	14
Overriding Schedule Permanently.....	14
Compressor Protection .....	15
Early Start.....	15
Change Filter.....	16
Replace Batteries .....	16

## Appendices


Troubleshooting.....	17
Limited Warranty.....	18

## 1 Turn Off Power to Heating/Cooling System

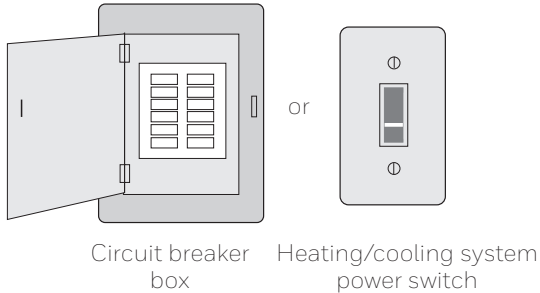

## 2 Remove Old Thermostat

Remove old thermostat but leave wallplate with wires attached.

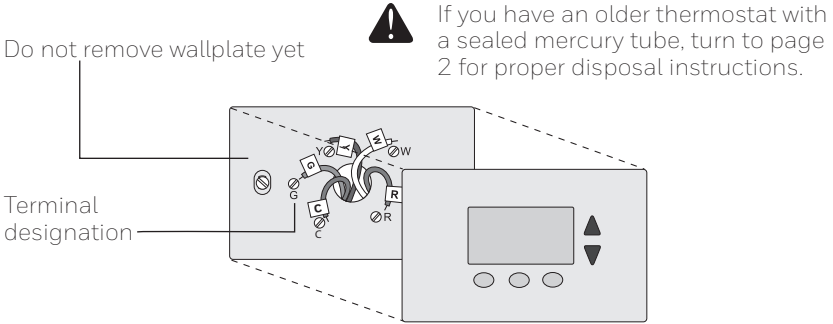

## 3 Label Wires with Tags


Label the wires using the supplied wire labels as you disconnect them.

Wiring Labels		Étiquettes de fils		Rotulos para los cables					
Apply these wiring labels to each wire with the appropriate terminal designation as you remove it from the existing thermostat.		Lectique vous retirez les fils des bornes du thermostat existant, collez ces étiquettes sur chaque fil correspondant à la lettre de la borne.		Coloque estos rotulos, con la designación de los terminales, en cada cable al remover los cables del thermostat actual.					
B	B	Y2	Y2	C	C	E	E	F	F
G	G	H	H	L	L	O	O	P	P
R	R	RC	RC	RH	RH	T	T	U	U
V/VR	V/VR	W	W	W1	W1	W2	W2	W3	W3
X	X	X1	X1	X2	X2	Y	Y	Y1	Y1

69-0R23EFS • 5-03 • Printed in U.S.A. [www.honeywell.com/yourhome](http://www.honeywell.com/yourhome)

M28100


Wire Labels

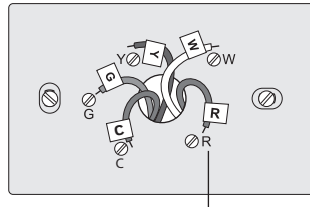

Terminal designation

## 4 Separate Wallplate from New Thermostat

Remove wallplate from the new thermostat and mount onto wall.

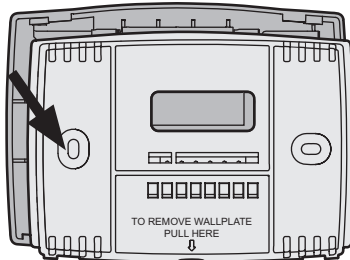


Wallplate

M32731

## 5 Mount Wallplate

Mount the new wallplate using the included screws and anchors.

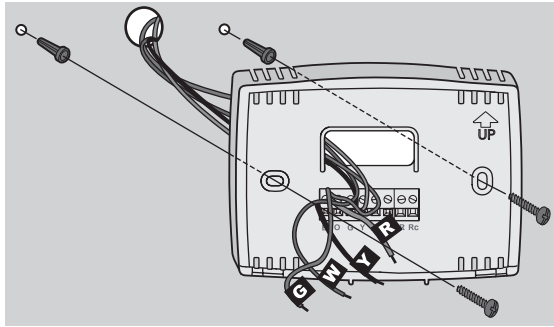

M32714


Drill 3/16-in. holes for drywall

Drill 3/32-in. holes for plaster

## 6 Connect Wires

Simply match wire labels.

If labels do not match letters on the thermostat, check “Alternate Wiring (Conventional Systems)” on page 6 and connect to terminal as shown (see notes, below).

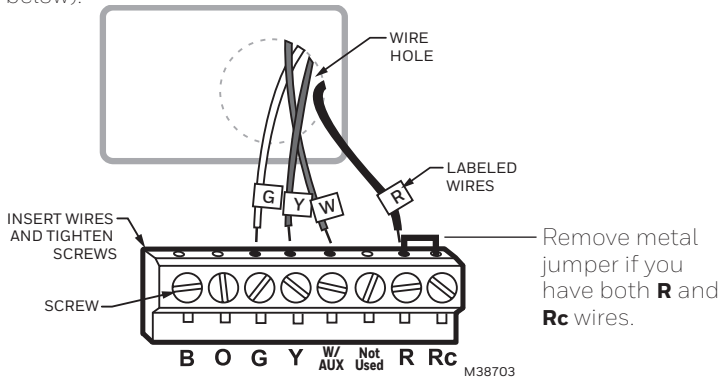


Maximum load: 1 A @ 24 Vac, 50/60HZ per output.

We are here to help. Call 1-800-468-1502 for wiring assistance.

## Alternate Wiring (Conventional Systems)


If labels do not match letters on the thermostat, check the chart below and connect to terminal as shown here (see notes, below).

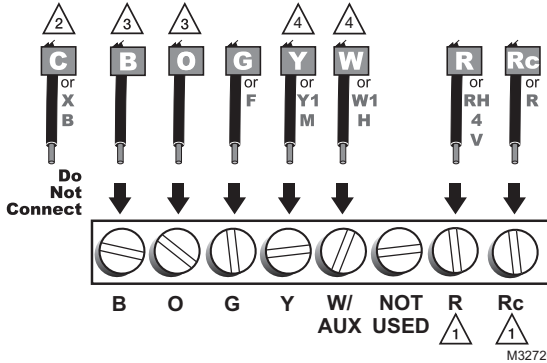

- 1 If wires will be connected to both **R** and **Rc** terminals, remove metal jumper.
- 2 Do not use **C** or **X**. Wrap bare end of wire with electrical tape.
- 3 If you have a **heat pump** without auxiliary/back-up heat connect **O** or **B**, not both.


## Alternate Wiring (Heat Pump)

If labels do not match letters on thermostat, see page 7.

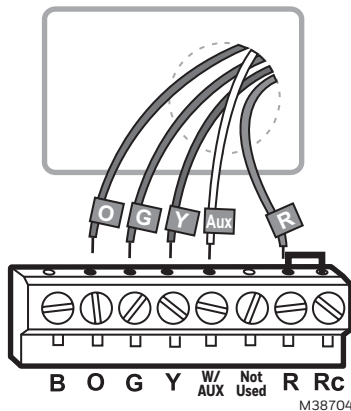

## Alternate wiring (for heat pumps with auxiliary or backup heat only)

If labels do not match letters on the thermostat, check the chart below and connect to terminal as shown here (see notes, below).

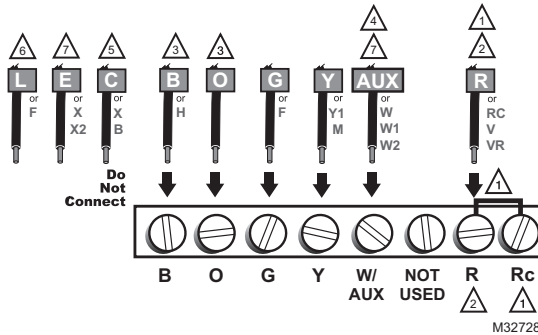


- 1 Leave metal jumper in place, connecting **R** & **Rc** terminals.
- 2 If your old thermostat had both **V** and **VR** wires, stop now and contact a qualified contractor for help.
- 3 If your old thermostat had separate **O** and **B** wires, wrap the B wire in electrical tape and do not connect.
- 4 If your old thermostat had **Y1**, **W1** and **W2** wires, stop now and contact a qualified contractor for help.
- 5 Do not use **C** or **X** wire. Do not use **B** wire if you already have **O** wire. Wrap bare end of wire with electrical tape.
- 6 Do not use **L** wire. Wrap bare end of wire with electrical tape.

If your old thermostat had **E** and **Aux** wires (or alternate wires), connect both wires to **Aux** terminal.

## 7 Install Batteries

Install two AAA alkaline batteries.

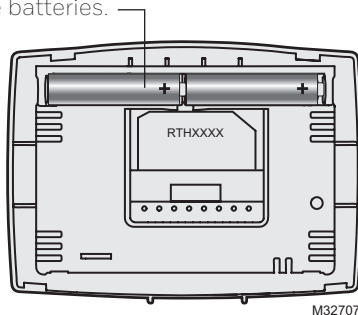


Back of thermostat

## 8 Set Fan Operation Switch

Move the switch to the proper setting:

**Gas or Oil:** For gas or oil heating systems, leave the fan operation switch in this factory-set position (for systems that control the fan in a call for heat).


**Electric or Heat Pump:** Change the switch to this setting for heat pump or electric heat systems. (This setting is for systems that allow the thermostat to control the fan in a call for heat, if a fan wire is connected to the **G** terminal.)

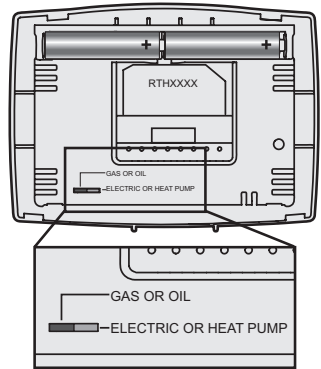

M32716

## 9 Install Thermostat Onto Wallplate


Install thermostat onto the wallplate on the wall.

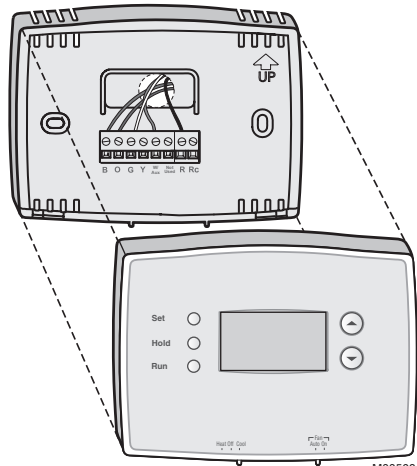

M33592

## 10 Turn Power Back On

Turn the power back on to the heating/cooling system.

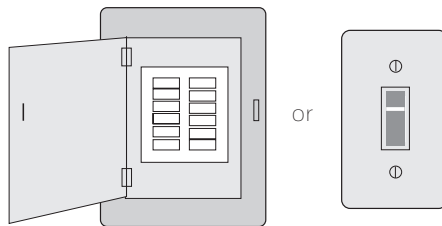

Circuit breaker box

Heating/cooling system  
power switch



# 11 If Your System Type is...

## If your system type is:

- Single Stage Heat and Cool
- Heat Only or Cool Only

## Congratulations, you're done!

## If your system type is:

- Heat Pump\* with Backup Heat

Continue with Advanced Installation to match your thermostat to your system type.

\*Heat Pump—an air conditioner that provides cooling in the summer, and also runs in reverse in the winter to provide heating.


## If you are not sure of your system type or if you have other questions, call us toll-free at 1-800-468-1502.

This thermostat works on 24 volt or 750 mV systems. It will NOT work on multi-stage conventional systems.

# Advanced Installation

## Enter System Setup

To enter system setup, press and hold both the ▲ and ▼ buttons until the display changes (approximately 5 seconds).

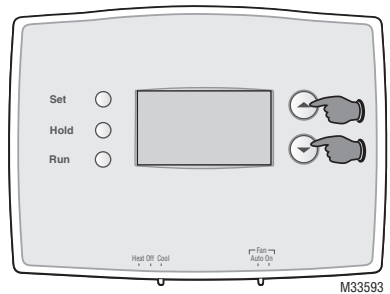

## Changing Settings

1. Press the ▲ or ▼ button to change the setting.
2. Press the ▲ and ▼ buttons simultaneously for one second to advance to the next function.
3. Press the **RUN** button to exit and save settings.

