

# RIM800

MX Detection Range - Relay Interface Module



## Features

- // Addressable changeover volt-free relay contact
- // LED indication of relay operation
- // Common MX module footprint
- // Range of mounting enclosures



## Description

The RIM800 Addressable Relay Interface Module provides one volt-free changeover contact unsupervised output. The relay is controlled by a command sent from the Tyco MX Control and Indicating Equipment (CIE) via the MX addressable loop and may be used to signal states to other systems (e.g. security systems) or to energise loads such as Door Holders. The relay operation is determined by the c.i.e. programming. The RIM800 has a red LED which may be configured to indicate relay activation and c.i.e. polling.

## Mounting

The RIM800 is supplied as an open circuit board (PCB) with mounting hardware and must be fitted in a suitable enclosure. It may be mounted on a gear plate using plastic standoffs, to an M520 Ancillary Cover and K2142 back box, or fitted into a D800 Ancillary Housing. The K2142 mounting box provides a convenient surface mounting enclosure and the M520 Cover is designed to accommodate the RIM800.

## Address Setting

The RIM800 is shipped with a default (invalid) address of 255 and must be set to the correct loop address using the 850EMT or MX Service Tool and programming lead.

## Specifications

Loop Voltage <sup>1</sup>	20V to 40Vdc
Quiescent Current	285µA
Alarm State Current <sup>2</sup>	2.8mA
Relay Contact <sup>3</sup> (maximum)	2A @ 30Vdc
Max. RIM800 per Loop <sup>4</sup>	200/250
Ambient Temperature	-25°C to +70°C
Storage Temperature	-40°C to +80°C
Relative Humidity	10% to 95% (non cond.)
<i>Indoor Applications Only</i>	
Dimensions (HWD)	61 x 84 x 25 mm
Wire Size (maximum)	2.5sq. mm
ActivFire Listed	afp-1446
FPANZ Listed	VF/642


## Part Numbers

RIM800	RIM800 PCB
M520	Ancillary Cover
517.035.010	K2142 Back Box
557.201.401	D800 Ancillary Housing

1. Addressable loop voltage provided by MX CIE.
2. With LED on.
3. Relay current is for resistive load.
4. MX4428/MX1. Refer to appropriate manual: LT0273 (MXP), LT0360 (MX1-NZ), LT0441 (MX1-Au) for design specifications.


## Wiring

RIM800 wiring:

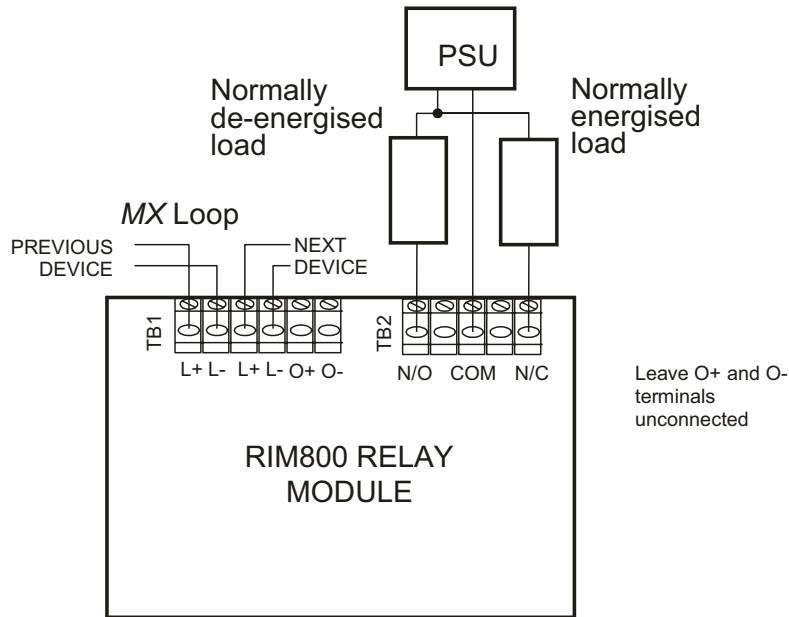

## Mounting

RIM800 fitted to M520 Cover.

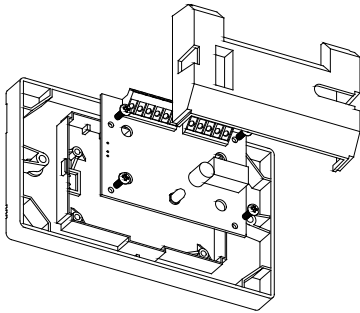

### Australia

Tyco Fire Protection Products

Level 3, 95 Coventry Street

Southbank VIC 3006

Tel : 1300 725 688

Tel : +61 3 9313 9700

Email : tfppcustservice.au@tycofp.com

### New Zealand

Tyco Fire Protection Products

17 Mary Muller Drive

Hillsborough PO Box 19-545

Woolston Christchurch 8241

Tel : +64 9 635 0760

Email : tsp.sales.nz@tycoint.com

Copyright © 2015 Tyco Australia Pty Limited. All rights reserved. Tyco reserves the right to make changes to any aspect of this publication at any time without notice. VIGILANT is a trademark of Tyco New Zealand Limited or its affiliates; MX TECHNOLOGY is a trademark of Thorn Security Limited or its affiliates; TYCO is a trademark of Tyco International Services GmbH.

RIM800datTFPP1505